 
 


Adding Email Destinations on a Sharp Multi Function Printer

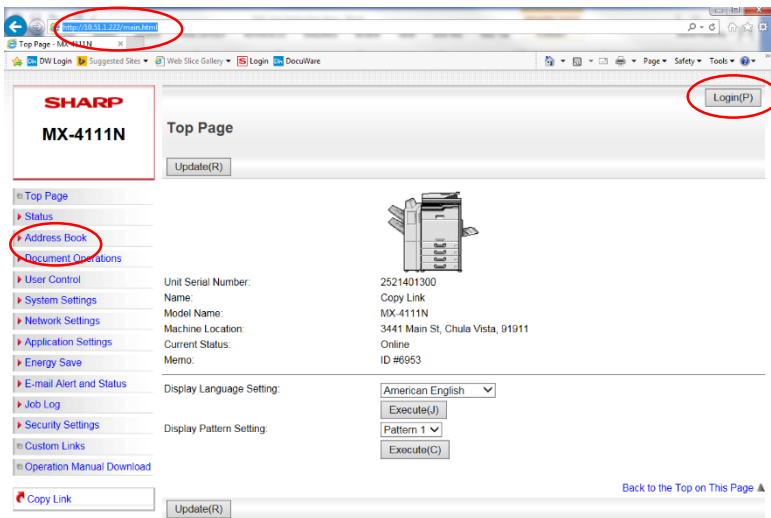

Log in to Device Webpage by typing the Printers IP address into your browser.

Login as an administrator. (PW: admin)

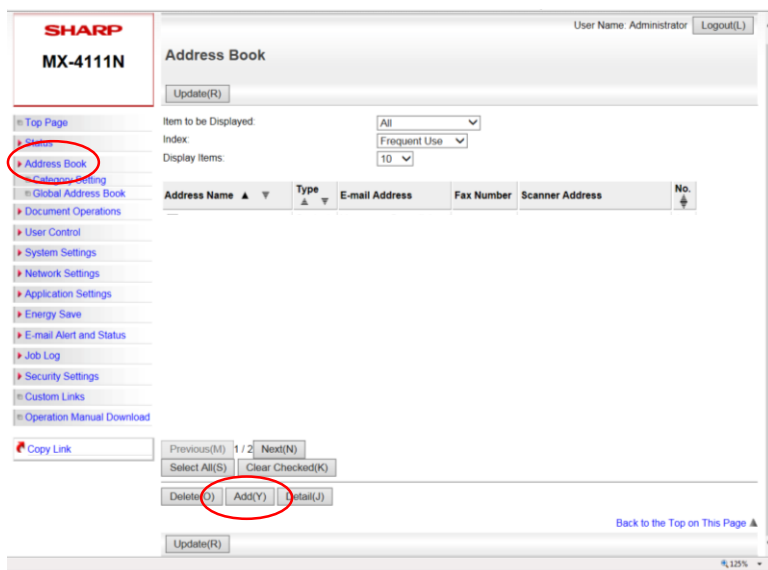

Select **Address Book** in the menu on the left

Select the **Add** button

SHARP
MX-4111N

User Name: Administrator Logout(L)

Address Book

Submit(U) Submit and Register Next(C) Back(Q)

Type: Contacts

Search Number: (1-2000)

Address Name (Required) (Up to 36 characters)

Initial: (Up to 10 characters)

Category: User 1

Register this Address to be added to the [Frequent Use] index.

Address Public Setting: All Not Set

Select user: User Selection(F)

Share also to the following group

1: None
2: None
3: None
4: None
5: None
6: None
7: None
8: None

E-mail Fax FTP Desktop Network Folder

Black & White: Compression Mode: MMR (G4)
Color/Grayscale: Compression Ratio: High
 Bk Letter Emphasis

Set as Default used

Delete This Address.(X) Add This Address.(Y)

Notice: If ended up with no destination upon deleting addresses used in various settings, the settings will be also cleared/deleted.

Back to the Top on This Page ▲

Submit(U) Submit and Register Next(C) Back(Q)

125%

Enter the **Address Name**

Select the **Email** tab

Enter the user **Email Address**

Select **Submit**

Note:

Select the **Set as Default Used** box for all new accounts